


## Fitting instructions for BMW R1200 RT LC TELFERIZER mount

Carefully prise up the BMW emblem from centre of steering yoke.



Insert mount anchor into this space holding it at a 45° angle as shown.

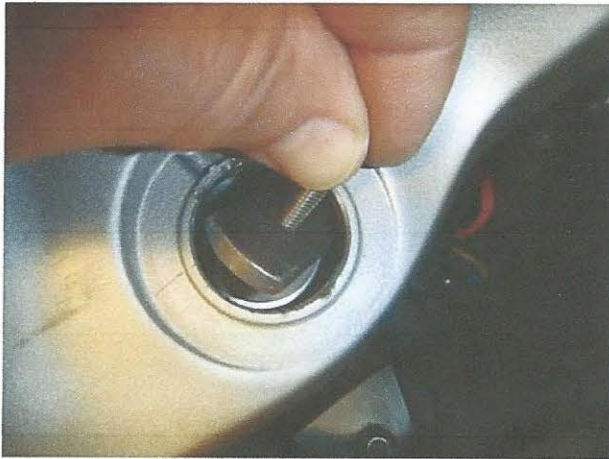

Position the threaded bar in centre of aperture ensuring it's anchored on two sides



Place base bezel over threaded bar and centre it.



Whilst pulling upwards on bar and anchor, screw on the 1" ball hand tight. Then just a little more using an 11mm spanner, do not over tighten. And that's it!